





DK380 Rhino-Rack VA, DA, Euro & HD crossbar instruction


IDENTIFICATION CHART

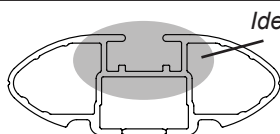


VA crossbar

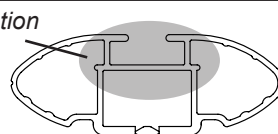

DA crossbar



EURO crossbar



HD crossbar

			FRONT CROSSBAR						REAR CROSSBAR					
Vehicle	Date	Crossbar	Front Right Pad/Clamp	Front Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/Clamp	Rear Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Lexus IS/IS h 4dr sedan	13-	1180mm	142697 SUB0152	142696 SUB0152	173mm	118mm	914mm / 35,63/64"	OUT	142612 SUB0256	142612 SUB0256	183mm	128mm	934mm / 36,49/64"	OUT
			Pad Arrow OUT						Pad Arrow REAR					




DK380 Rhino-Rack VA, DA, Euro & HD crossbar instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.


Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

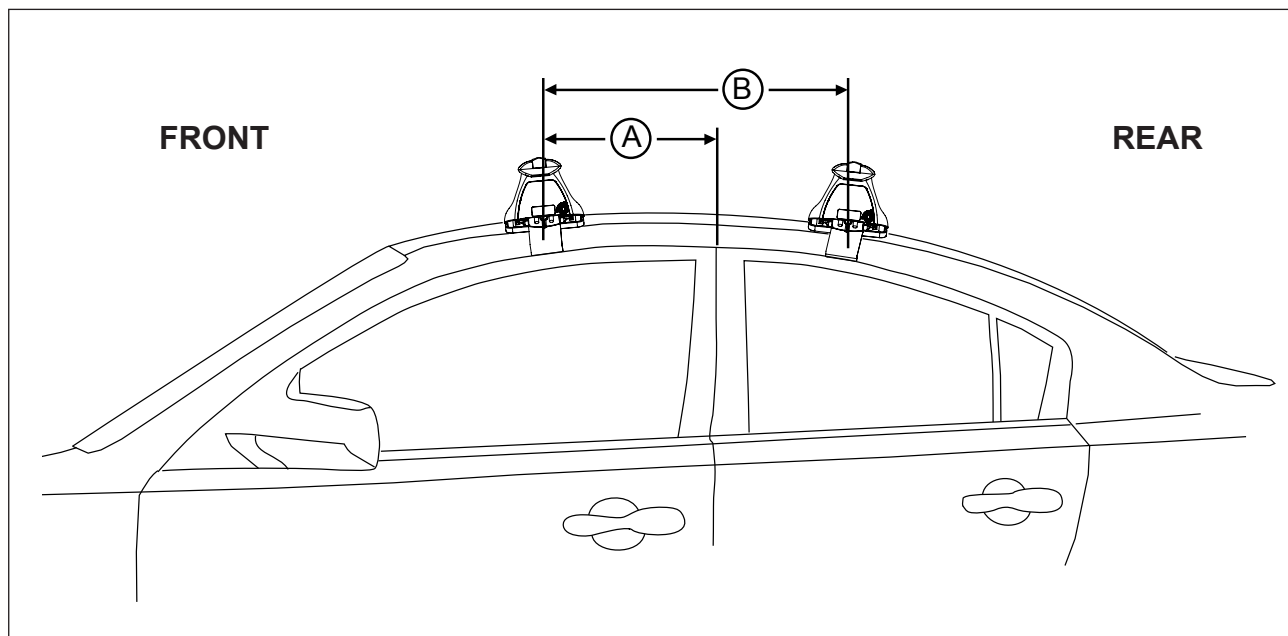

Direction of Pad, Arrow and Foot Plates

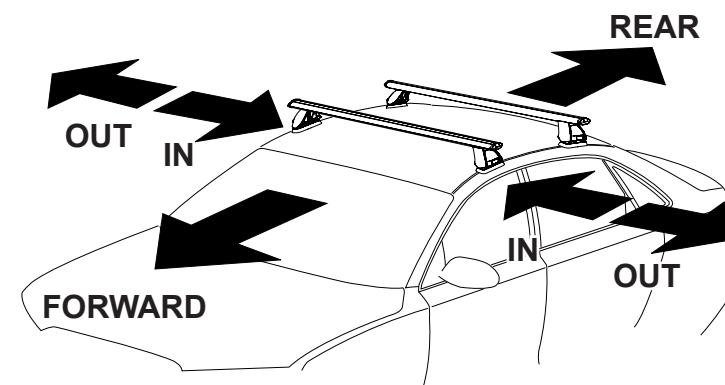

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Lexus IS/IS h 4dr sedan	13-	230mm / 9,1/16"	690mm / 27,3/16"	75kg/ 165lbs