Intercooler Tube Installation Instructions: 2010-2012 Dodge Ram Cummins Intercooler Tube Upgrade L6-6.7L (td)

advanced FLOW engineering™
P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
aFepower.com

Kit P/N: 46-20089

Make: Dodge

Model:	Year:	Engine:
Ram 2500	'10-'12	L6-6.7L(td)
Ram 3500	'10-'12	L6-6.7L(td)

Tools Required:
7/16" deep socket
3/16" hex key

Parts list
1 Tube, Upgrade - 05-60048
1 Coupler, hump 3-1/2" - 05-60025
1 Coupler, hump 3" - 05-60012
2 Clamps, spring 3-1/2" - 05-60013
2 Clamps, spring 3-3/4" - 05-60024
2 Plugs, hex head socket (1/8" NPT) - 03-50029

Complete Kit

Step 1

Complete Stock Intercooler tube.

Step 2

With 7/16" deep socket, loosen clamp on intercooler.

Step 3

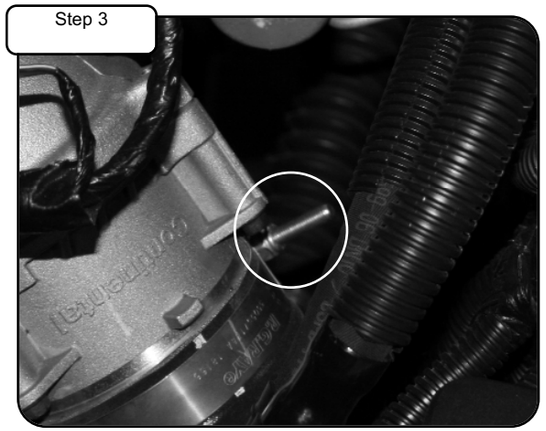

With 7/16" deep socket, loosen clamp on manifold. Push down on intercooler tube and disconnect from manifold.
Remove stock intercooler tube from vehicle.

Step 4

Install plugs in to 1/8" NPT ports with 3/16" hex key.

Step 5

Install 3" hump coupler with clamps provided to new tube.

Step 6

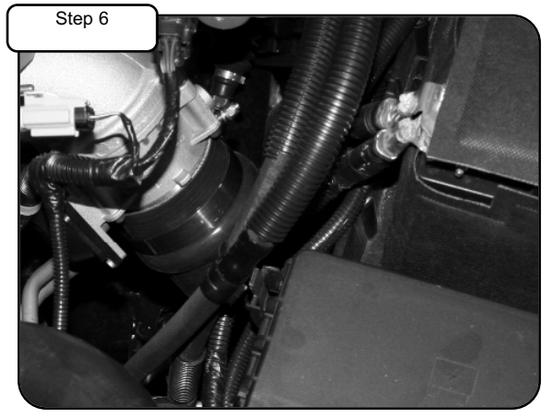

Install 3-1/2" hump coupler to manifold with clamps provided.

Step 6

Install new tube and position into coupler on manifold. Tighten and torque all four clamps to 75 in-lbs. ***Check and tighten after 50 miles!*** Your Intercooler tube installation is now complete. Thank you for choosing aFe power!