SUP 113 d

INSTALLATION INSTRUCTIONS

- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

INSTALLATION INSTRUCTIONS

1 • Position **Hood Product** centrally over hood.
- Remove two rubber hood stops corresponding to outer slots in **Hood Product** tag.
- Note the two holes corresponding to center slots in **Hood Product**.

2 • Insert plastic screw plugs into all four holes previously noted.

3 • Fit the two center tags first then work outwards to remaining tags & wing clips.

4 • Clean with alcohol wipe provided, area on top and underside of hood corresponding to holes in outer edges of **Hood Product**.
- Adhere abrasive resistant tape strips to edge of hood corresponding to holes at either end of **Hood Product**.
- Ensure that only 1/2" of the tape folds under the lip.

5 • Position the spring section of clip over the abrasive resistant tape on the hood lip.
- **Note: It is essential that no part of the clip contacts the top surface of the hood.**

6 • Fasten the **Hood Product** wings to the clip with the phillips head screws and fiber washers provided.

- **Note: On vehicles with limited hood to grill clearance it may be necessary to adjust hood bump stops.** (Refer to owners manual).
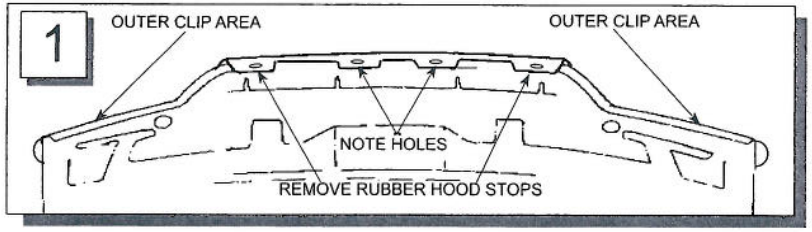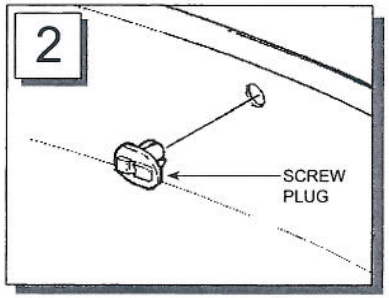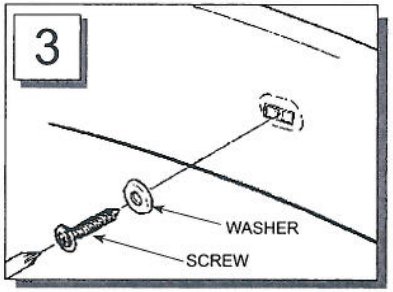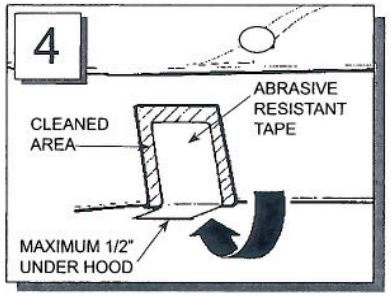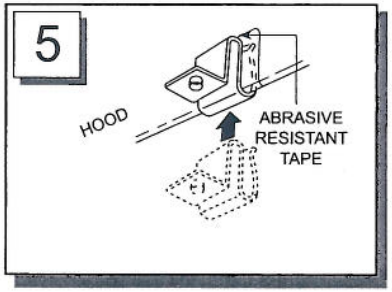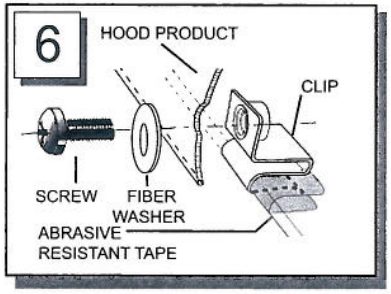
To Remove: Reverse above procedure.
To Clean: Use mild detergent and water solution. (Do **NOT** use solvents).
Avoid the use of automatic "Brush Style" car washes.
When closing the hood, do **NOT** pull on **Hood Product**.