



IMPORTANT WARRANTY & INSTALLATION INSTRUCTIONS ATTACHED

*Please Forward All Attached Information to Consumer.
Warranty Not Valid Unless Returned to CORSA.*

We ask that you take a few moments to
complete our warranty registration form.

To Activate Your LIFETIME WARRANTY, Go To:
CORSAPERFORMANCE.COM/WARRANTY



For Full-Color Installation Instructions, Please Visit:
CORSAPERFORMANCE.COM & Search Part #

Please be sure to review the enclosed instructions prior to beginning the installation process.
If you have any questions about the enclosed parts, instructions or encounter a problem during
installation, **CALL CORSA PERFORMANCE TECHNICAL ASSISTANCE AT 800.486.0999.**

Please take time to read and understand these installation instructions.

We recommend that the installation of this system be performed by a qualified service center or professional muffler installer who has the necessary equipment, tools and experienced personnel. However, if you decide to perform this install, the use of a hoist and an additional person will be required.

CAUTION: Never work on a hot exhaust system. Allow time for the vehicle to cool. Always wear eye protection when working under a vehicle.

Recommended Tools:

- 9/16", 10mm, 13mm, 15mm, 18mm socket and 1/2" drive ratchet
- 6" extension
- Safety glasses
- Soapy water
- Torque Wrench

Please confirm that all parts are present before beginning the factory exhaust system removal and CORSA Exhaust system installation.

TORQUE SETTINGS:

- Intermediate Exhaust pipe-to-rear
- Intermediate Exhaust-37 Ft.Lb.
- Rear Exhaust Hanger Nut-12Ft.Lb.
- Upper Rear Stabilizer Bar-50 Ft.Lb.
- Lower Rear Stabilizer Bar-70 Ft.Lb.
- TORCA Exhaust Band Clamps-45 Ft.Lb.

SYSTEM CONTENTS:


- (2) Mufflers w/ integral exhaust pipes & tips
- (2) Over-the-axle pipes
- (4) TORCA muffler clamps
- (2) Flange gaskets
- Anti-seize lubricant



Pro-Series 3.5 Tips



Tigershark Tips

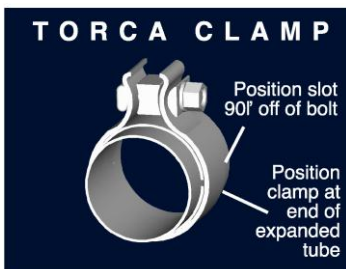

Please be sure to review the attached instructions prior to beginning the installation process. If you have any questions about the enclosed parts, instructions or encounter a problem during installation, call CORSA Performance Technical Assistance at 800.486.0999. Do not attempt to make any modifications to parts as this will void your warranty.

All Torca clamps should be tightened using a properly calibrated Torque Wrench. Using an air impact gun will damage the clamp and reduce its ability to effectively seal the joint. It may also cause the joint to separate thereby causing damage to your exhaust system and your vehicle.

CAUTION: Prior to installation, be sure your vehicle is parked on a level surface, and the exhaust system is cool. For safety purposes and ease of installation, we urge you to take your vehicle to a qualified service center or muffler installer that employs the use of a lift.

- 1) Your C5 must be raised high enough to remove the one-piece stock mufflers and Over-axle Pipes.
(for safety purposes, ease of installation and to avoid the need of cutting the factory over-axle connecting pipes, we urge you to take your C5 to a qualified service center or muffler installer that employs the use of a lift)
- 2) Using an 18mm socket, remove the four bolts securing the rear sway bar to the chassis and let the sway bar drop down out of the way (**See Fig. A**)
- 3) Unbolt each of the over-axle pipes at the front flange using a 15mm socket where they bolt to the H-pipe. Unbolt rear muffler hangers using a 13mm socket with extension from frame and remove. Do not unbolt or remove the catalytic converters or H-pipe (**See Fig. B**)
- 4) Carefully remove each stock muffler by pulling muffler hanger from rubber hanger mount. To facilitate removal you can remove rubber hanger mount and bolts. (Owners of 2000 and newer models will need to remove 4 bolts and 2 heat shields, 1 each side, in order to remove stock mufflers, Automatic Transmissions only) (**See Fig. C**)



FIG. A



FIG. B



FIG. C

- 5) Install the adjustable CORSA over-axle pipes (**See Fig. D**), one at a time, making sure to use the new gaskets and hardware provided, and tighten bolts (**See Fig. E**). Be sure to sand or scrape any residue from flanges to ensure proper seating. (**See Fig. F**)
- 6) Reinstall the 2 heat shields and 4 bolts for each (1999 and newer models, automatic transmission only).
- 7) Reinstall rear muffler rubber hanger mounts frame and tighten bolts to factory specifications.
- 8) Install the new CORSA mufflers, one at a time and tighten over-axle Pipe to muffler inlet TORCA clamps.

INSTALLATION NOTE: Be sure to apply the anti-seize lubricant that has been provided to all bolts, fasteners and clamps. A pouch with anti-seize lubricant is included with the hardware kit. Apply the supplied anti-seize lubricant to the threads **ONLY (See Fig. G)** of all TORCA band clamps. Failure to follow this procedure can cause the nuts to seize on clamps and potentially damage threads.

WARNING: Be sure to thoroughly clean hands after use. Anti-seize lubricant will tarnish stainless steel parts.

Lightly tighten the TORCA muffler clamps to the Over-Axle Elbow Pipes and check alignment of tips from rear end of car. Use a straightedge to verify that the exhaust tips are parallel. Adjust as necessary, then tighten TORCA clamps.

TORCA Clamp Torque Setting: 45ft.-lbs.

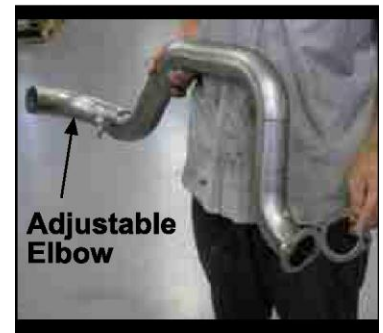


FIG. D



FIG. E



FIG. F



FIG. G

NOTE: Adjustable over-axle pipes are set at the factory. However, If needed, they can be adjusted by loosening the clamp on the adjustable over-axle pipe (elbow) and align to fit (**See Fig H**)

- 9) Reinstall the sway bar with 18mm socket and tighten to factory specifications. take care not to cross thread bolts (**See Fig. I & J**)
- 10) Once installation is complete, start engine and check that there are no leaks or rattles.
- 11) It is MANDATORY that all clamps and fasteners be checked and re-tightened (if necessary) after a road test.



FIG. H



FIG. I



FIG. J

NOTE: During cold weather start-ups you may experience an exhaust sound that is deeper and louder in ton than usual. This is temporary and will diminish to normal levels once your engine has reached its normal operation temperature.

NOTE: Immediately following the installation of your exhaust system, you may experience a trace of smoke after initial start-up. DO NOT be alarmed. The smoke is caused by the burning of a small amount of forming oil residue used in the manufacturing process.

CORSA Performance Exhaust System Adjustment Section:

After a system is initially installed, if the exhaust tips do not line up, loosen the clamp joints on the side of the exhaust system which is not lining up as desired. There are three different adjustments possible when installing the CORSA Performance Exhaust System for the CS Corvette:

- 1) If the tips do not protrude out the same distance from the back bumper of the car. A linear adjustment of up to 1/2" can be made at the adjustable elbow joint (**See Fig. A**). By sliding the elbow on or off the axle pipe, the correct fit can be achieved.
- 2) If the mufflers are not running parallel with one another, or the tips are not pointing straight out of the car. With the clamps loose, push the muffler, rotating it around the tongue hanger (**See Fig. B**), into the desired location and then retighten the clamps.
- 3) If one muffler is hanging lower than the other. By pushing up on the lower muffler (**See Fig. C**), while the clamps are loose, the correct orientation should be achieved. The mufflers are designed to be visible (about 1 inch of muffler) when looking from the side of the car.

When retightening the clamps, it is recommended that one person hold the tips in the desired location, while another person tightens the clamps. By utilizing these three adjustments, any exhaust tip alignment issues should be easily corrected.

**FOR TECHNICAL ASSISTANCE, PLEASE
CALL (800) 486-0999.**

