
S7026

2010-2012 CAMARO SS 6.2L AUTOMATIC, CAT BACK DUAL EXHAUST (RECTANGULAR TIPS for GROUND EFFECTS PACKAGE)



- FRONT PIPE (2PCS)
- 2. RESONATOR ASSMBLY
- 3. DRIVER SIDE TAIL PIPE
- 4. PASSENGER SIDE TAIL PIPE
- 5. DRIVER SIDE MUFFLER
- 6. PASSENGER SIDE MUFFLER
- 7. 3" CLAMP (6 PCS)
- 8. EXHAUST TIP DRIVER SIDE
- 9. EXHAUST TIP PASSENGER SIDE
- 10. CROSS-MEMBER

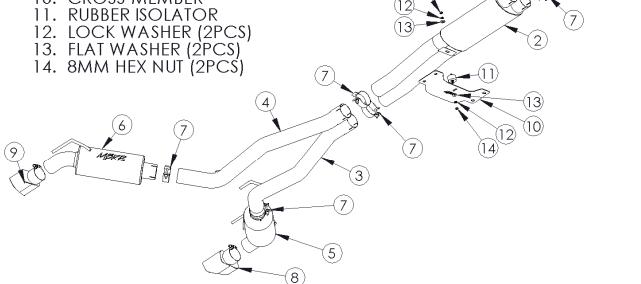

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

\$7026 © 01/13 PAGE 1 OF 3





Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

Removal of Stock System:

- 1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
- 2. Remove the factory cross-member using a 15mm socket. Retain the fasteners for the installation. The cross-member can be retained. **Refer to Figure 1**.
- 3. Loosen the sleeve clamps on the factory exhaust located behind the catalytic converters using a 15mm socket. Using a screwdriver, pry back the tabs on the clamps. **Refer to Figure 1**.
- 4. The stock exhaust is one piece from the catalytic converters back. We recommend three people remove the stock exhaust, one person at the front the others supporting the muffler to prevent the tips from marking the fascia. With help in place remove the rubber isolators and then slide the entire system rearward to remove it from the sleeve clamps behind the catalytic converters. Once you have lowered the system just below the sleeve clamps you can push the system forward to remove. **Refer to Figure 2 & 3. Figure 4** shows the exhaust removed.

Installation of MBRP Inc. Performance Exhaust:

1. Loosely assembly the **Front Pipes** to the vehicle using the factory sleeve clamps. The **Front Pipes** should be on an upward slope to the **Resonator Assembly**, approximately ten degrees. **Refer to Figure 5.**

S7026 © 01/13 PAGE 2 OF 3





Figure 6



Figure 7



Figure 8



Figure 9

- 2. Install the **Cross-Member** using the hardware removed earlier. Loosely Install the **Rubber Isolator** using the hardware provided. **Refer to Figure 6**.
- 3. Loosely install the **Passenger Side Tail Pipe** and **Driver Side Tail Pipe** onto the **Resonator Assembly** using two **3" Clamps.** Attach the factory rubber isolators to the **Tail Pipe** hangers. **Refer to Figure 7**.
- 4. Carefully install the **Passenger Side Muffler** onto the **Passenger Side Tail Pipe** using a **3" Clamp** and mount it to the factory rubber isolator. Repeat on the driver's side. **Refer to Figure 8**.
- 5. Install and adjust the **Exhaust Tips.** Before tightening the system check that the tips are in the center of the fascia openings. Insert a 1" wood or rubber spacer between the **Resonator Assembly** and the **Cross-Member** before tightening the system. Check to make sure the **Resonator Assembly** is level. Starting at the front of the exhaust, tighten all clamps and connections. **Refer to Figure 9.**
- 6. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the fascia, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



Congratulations! You are ready to begin experiencing the improved power, sound and driving excitement of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.

\$7026 © 01/13 PAGE 3 OF 3