


2006- VOLKSWAGEN JETTA 2.0L 4 CYL. TURBO

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. To Remove the OEM exhaust system, you will need to cut the pipe over the rear axle area, as shown in Dia. 2. Disengage the welded hangers from the OEM rubber insulator and remove the rear section of the OEM exhaust system. Do not damage or discard the clamp or rubber insulators, as they will be reused to mount the new system. Loosen the OEM clamp and disengage the welded hanger from the rubber insulator and remove the rest of the OEM exhaust system.

Step 2: To install the new exhaust system, use a front to rear method. Install the new mid muffler assembly by fitting the welded hangers into the rubber insulators, and by reusing the OEM clamp. Leave all clamps loose for the final adjustment of the complete system. Using a supplied a 2.5" clamp, install the rear muffler assembly in a similar fashion.

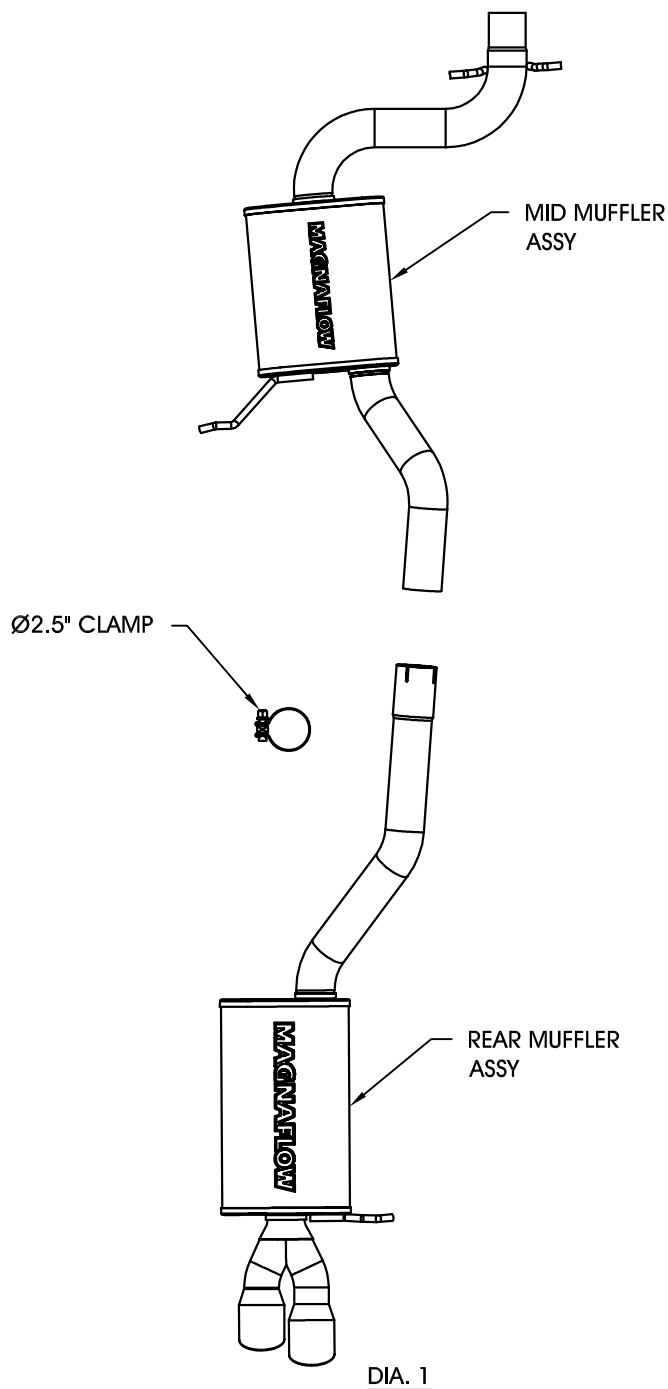


*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688

2006- VOLKSWAGEN JETTA 2.0L 4 CYL. TURBO

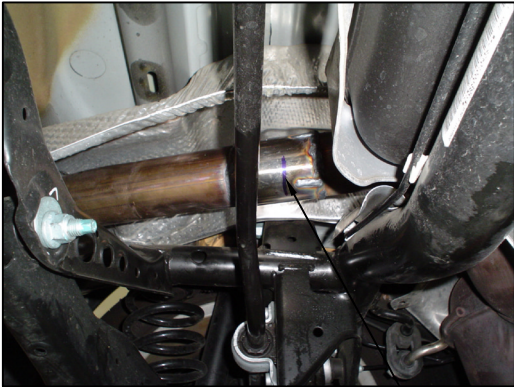

DIA. 2

CUT PIPE

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 65ft-lbs). U-bolt clamps should be tightened to approximately 30-35ft-lbs. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.