
PARTS LIST:

Qty	Description	Qty	Description
1	Driver/Left Sidebar	24	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Sidebar	24	8mm Lock Washers
2	Front Mounting Brackets	24	8mm x 22mm OD x 2mm Flat Washers
4	Center & Rear Mounting Brackets		

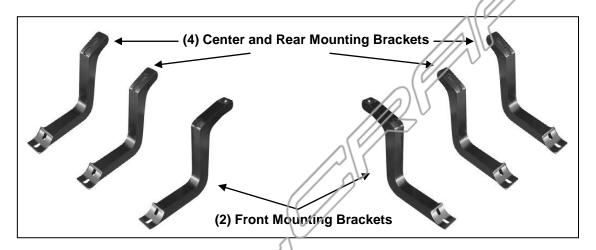

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY, ASSISTANCE IS RECOMMENDED.
- 2. Starting on the driver side front of the vehicle, remove the (2) factory hex bolts securing the lower rocker panel bracket to the bottom of the body, (Figure 1). NOTE: Only install (1) bracket at a time. Select (1) Front Mounting Bracket. Hold the Sidebar Bracket in place over the factory rocker panel bracket. Bolt the Mounting Bracket to the vehicle using the included (2) 8mm x 30mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (Figure 2). Do not tighten hardware at this time.
- 3. Repeat Step 2 for Center and Rear Bracket installation, (Figures 3 & 4).
- **4.** With assistance, carefully place the Driver/Left Sidebar onto the (3) Brackets. **WARNING**: Do not rotate the Sidebar on the cradle or the finish on the Sidebar may be damaged. Align the threaded holes in the bottom of the Sidebar with the holes on the Mounting Brackets. Attach the Sidebar to the Mounting Brackets with the included (6) 8mm x 30mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, **(Figure 5)**. Do not tighten at this time.
- 5. Level and adjust the Sidebar properly and tighten all hardware.
- **6.** Repeat **Steps 2 5** for passenger Sidebar installation.
- **7.** Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.


For gloss black finishes: Mild soap may be used to clean the Sidebar.

SIDEBAR


2010 - 14 TOYOTA 4RUNNER "SR5" AND "LIMITED" MODELS WITH ROCKER PANEL EXTENSIONS EXCLUDES "TRAIL EDITION"

Driver Side Installation Pictured

8mm x 30mm Hex Bolts

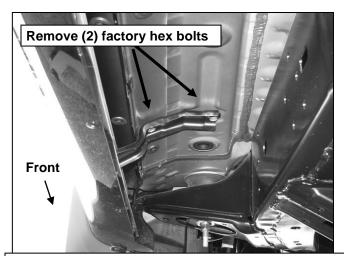


(Fig 1) Driver/Left Front Mounting Location Pictured

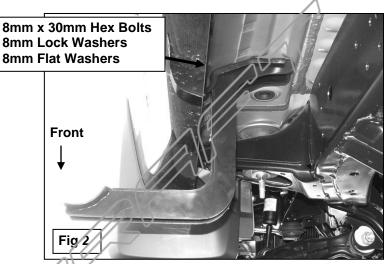




(Fig 3) Driver/Left Rear Mounting Location Pictured

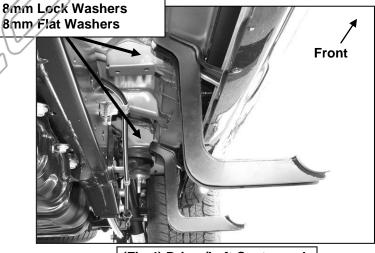

(Fig 4) Driver/Left Center and Rear Brackets Pictured

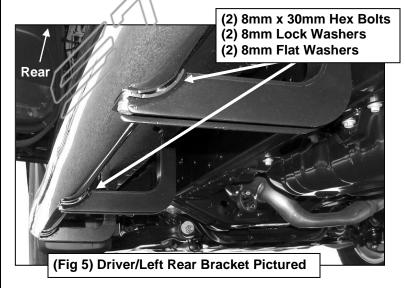



Page 2 of 2 4/3/12 (DP)