




advanced FLOW engineering Instruction Manual P/N: 77-46405


Make: Audi	Model: A3	Year: 2015-2016	Engine: L4-1.8L (t)
Make: Audi	Model: A3/ Quattro (AWD)	Year: 2015-2020	Engine: L4-2.0L (t)
Make: Volkswagen	Model: Golf (MKVII)	Year: 2015-2020	Engine: L4-2.0L (t)
Make: Volkswagen	Model: Golf SportWagen	Year: 2015-2019	Engine: L4-1.8L (t)
Make: Volkswagen	Model: GTI (MKVII)	Year: 2015-2020	Engine: L4-2.0L (t)

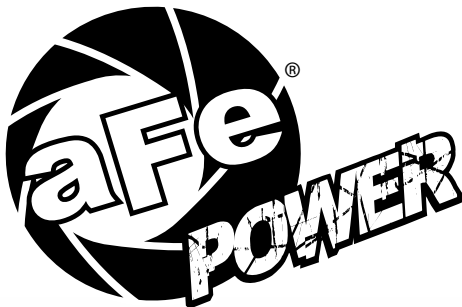

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Module	R77-46405
B	1	LED Switch	05-70029
C	2	Velcro (2 Inches)	05-01244
D	4	Cable Ties	05-60167

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

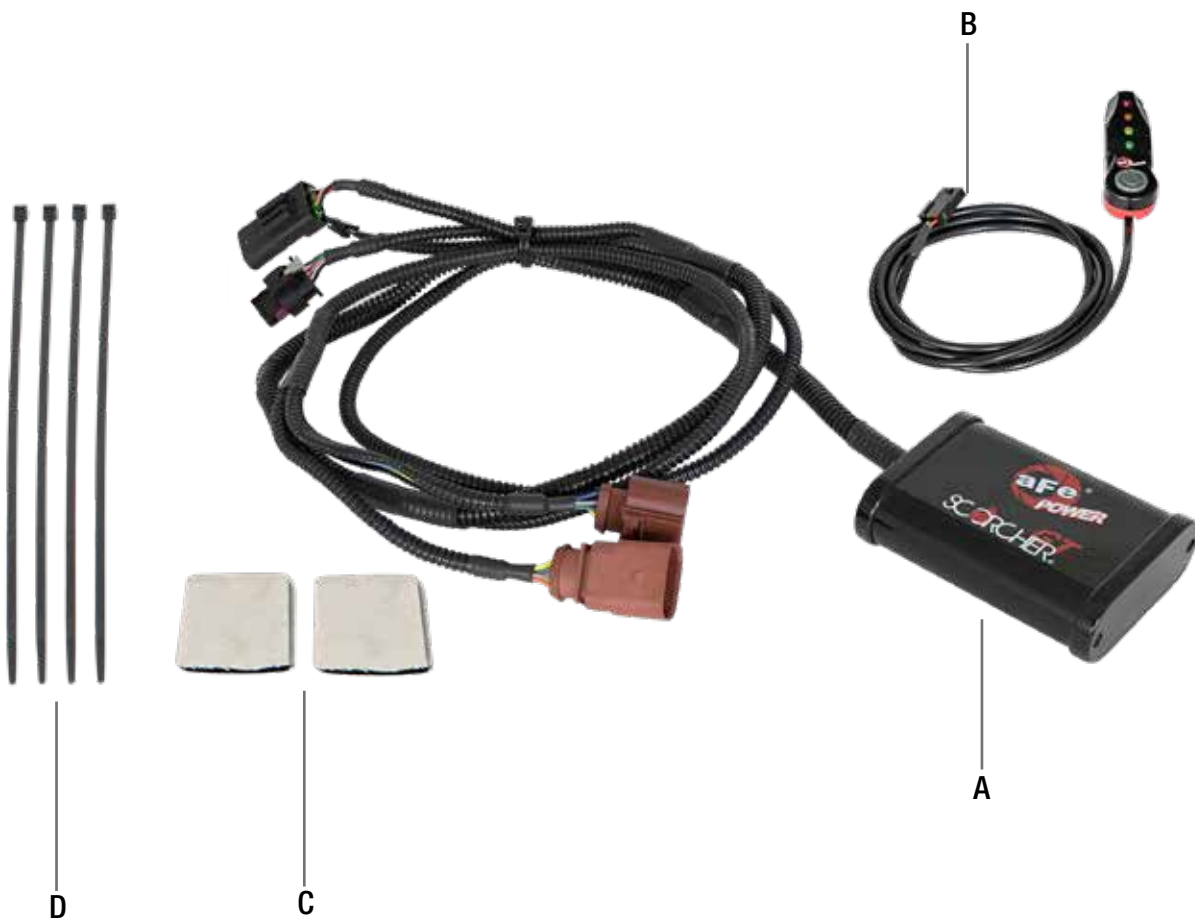



SLEEP MODE

Figure A

Refer to Figure A for Step 1.

Step 1: Before installing your aFe module, you will have to place your vehicles ECU in sleep mode. In order to do this you will need to do the following.

- If the engine is cold, open the hood, close the doors, lock the car and wait 30 seconds.
- If the engine is warm, open the hood, close the doors, lock the car and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes, disconnect the battery



Refer to Figure B for Step 2.

Note: Pictures are from a 2015 VW GTI 2.0L turbo, other vehicles may look different.

Step 2: Locate the MAP ① and TMAP ② sensors. The MAP sensor is located on top of the intake manifold under the engine cover. The TMAP sensor is located on the charge pipe on the lower front of the engine, underneath the AC compressor.



Refer to Figure C for Steps 3-4.

Step 3: Remove the engine cover to gain access to the MAP sensor then disconnect the MAP sensor.

Step 4: Locate the MAP sensor jumper harness on the aFe POWER module. This is the shorter harness with the black connector. Plug the female connector of the module into the factory MAP sensor, then the male connector of the module into the female connector of the engine harness.



Note: Make sure connections are fully engaged. Usually, connectors make a snapping sound when fully engaged.



Figure D

Refer to Figures D for Steps 5-6.

Step 5: Locate and disconnect the TMAP sensor. The TMAP sensor can be accessed by reaching down underneath the AC compressor, or from the bottom by removing the bottom tray.

Step 6: Locate the TMAP sensor jumper harness on the aFe POWER module. This is the longer harness with the brown connector. Plug the female connector of the module into the stock TMAP sensor, then take the male connector of the module and connect to the female connector of the engine harness.



Figure E

Refer to Figure E for Steps 7-8.

Step 7: Carefully route the switch cable behind steering wheel cover.

Step 8: Mount the Switch on an open, flat surface.



REMOVAL

Figure F

Refer to Figure F for Steps 9-11.

Step 9: Remove the single torx screw holding on the foot trim panel, then remove the panel.

Step 10: Route the switch cable through firewall and into the engine bay. Follow the main harness through the grommet into the firewall. Plug the end of the cable to the module.

Step 11: Re-install foot trim panel.



Figure G

Refer to Figure G for Step 12.

Step 11: Mount the module in a safe location, using the supplied Velcro strip. Then, secure the wires and module away from any extreme heat and moving parts, with the provided ties. Make sure all connections are secured and fully engaged.



Figure H

Refer to Figure H for Step 13.

Step 13: When turning on the vehicle, each LED will flash. It will stop at its last setting.

The LED on the switch represents the different level of power.

- Green LED: Stock
- Yellow LED: Sport
- Orange LED: Sport+
- Red LED: Race

Use the grey button to select the desired setting. Power adjustments can be done at any moment.

Thank you for choosing aFe POWER!



Page left blank intentionally

Page left blank intentionally



OE Replacement Air Filter



P/N: 30-10254 (P5R)
31-10254 (PDS)

Air Intake System



P/N: 54-12672 (P5R)
51-12672 (PDS)

Intake System Cover



P/N: 54-12678-B

Momentum GT Intake



P/N: 51-76403 (PDS)
54-76403 (P5R)

Sprint Booster V3



P/N: 77-16408


Warranty

General Terms:


- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72,TF	2 years
Air Intake Systems	50, 51, 54, 55, 75,TR.TA,TL	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years
Tuners	77	1 year


No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

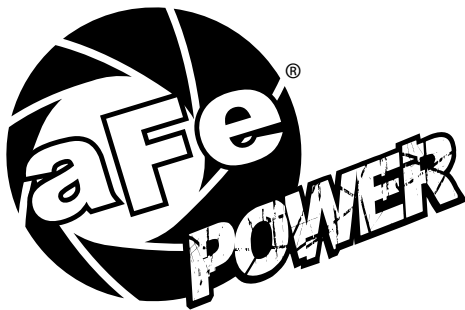

advanced FLOW engineering, inc.
252 Granite Street Corona, CA 92879
TEL: 951.493.7100 TECH: 951.493.7185
E-Mail: Tech@aFepower.com

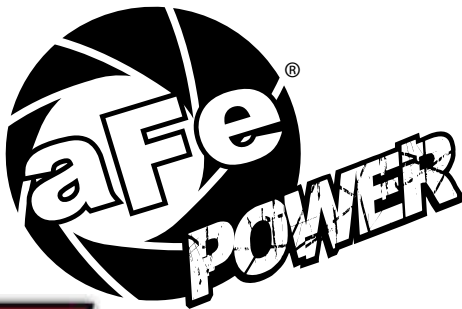

GT
MOMENTUM

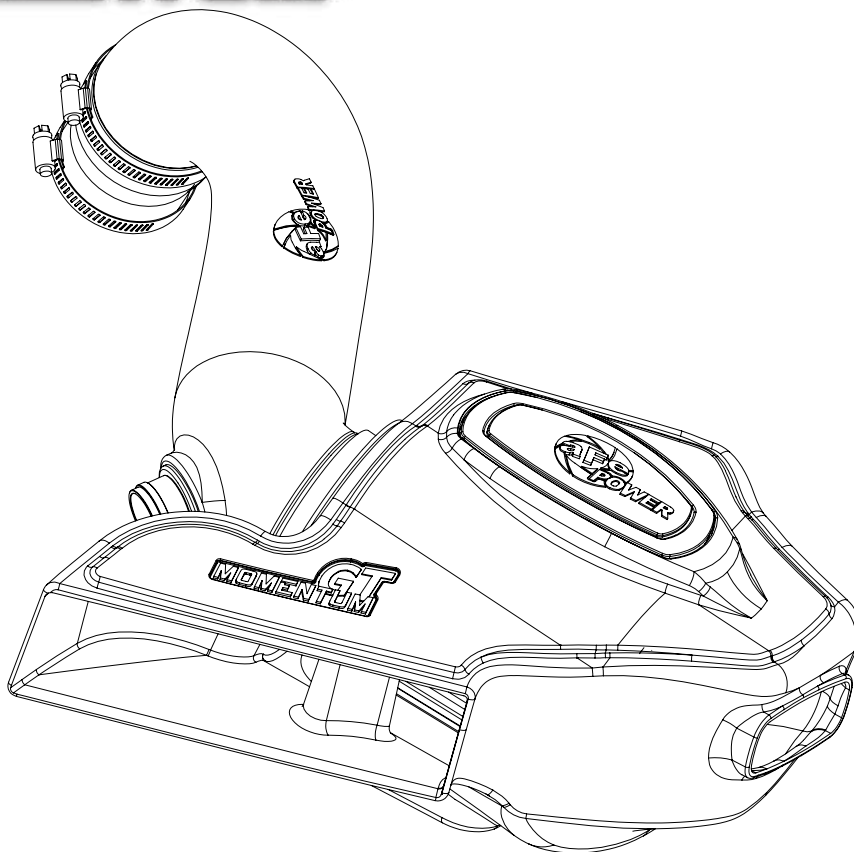

advanced FLOW engineering

Instruction Manual P/N: 51-76403 / 54-76403 Momentum GT Cold Air Intake System

Make: Audi	Model: A3	Year: 2015-2016	Engine: L4-1.8L Turbo
Make: Audi	Model: A3	Year: 2015-2020	Engine: L4-2.0L Turbo
Make: Audi	Model: S3	Year: 2015-2020	Engine: L4-2.0L Turbo
Make: VW	Model: Golf / GTI	Year: 2015-2020	Engine: L4-1.8L Turbo / 2.0L Turbo

NOTE: **Excluding** Model: **A3** Year: **15-16** LEV II SULEV Engine Test Groups FVGAV02.0APA & GVGAV02.0APA
NOTE: **Excluding** Model: **Golf** Year: **15-16** LEV II SULEV Engine Test Groups FVGAV02.0APA & GVGAV02.0APA
NOTE: **Excluding** Model: **GTI** Year: **15-16** LEV II SULEV Engine Test Groups FVGAV02.0APA & GVGAV02.0APA



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

Retain factory parts for future use.


Label	Qty.	Description	Part Number
A1	1	Air Filter (Pro 5R)	24-91103
A2	1	Air Filter (Pro DRY S)	21-91103
B	1	Tube	05-76403B1
C	1	Housing	05-76403B2
D	1	Cap	03-50179
E	1	Coupling, Reducer	05-01196
F	1	Fitting, Smog Pump	05-01096
G	1	Grommet	03-50139
H	1	Clamp #48	03-50007
I	1	Clamp #44	03-50019
J	3	Grommet	03-50647
K	1	Nipple Brass hose	03-50191
L	1	Plug, Urethane	05-01225

Installation will require the following tools:

8mm nut driver, 1/4" Socket Wrench, 13mm deep socket, Torx25 Screwdriver

Recommended: Silicone Lubricant

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

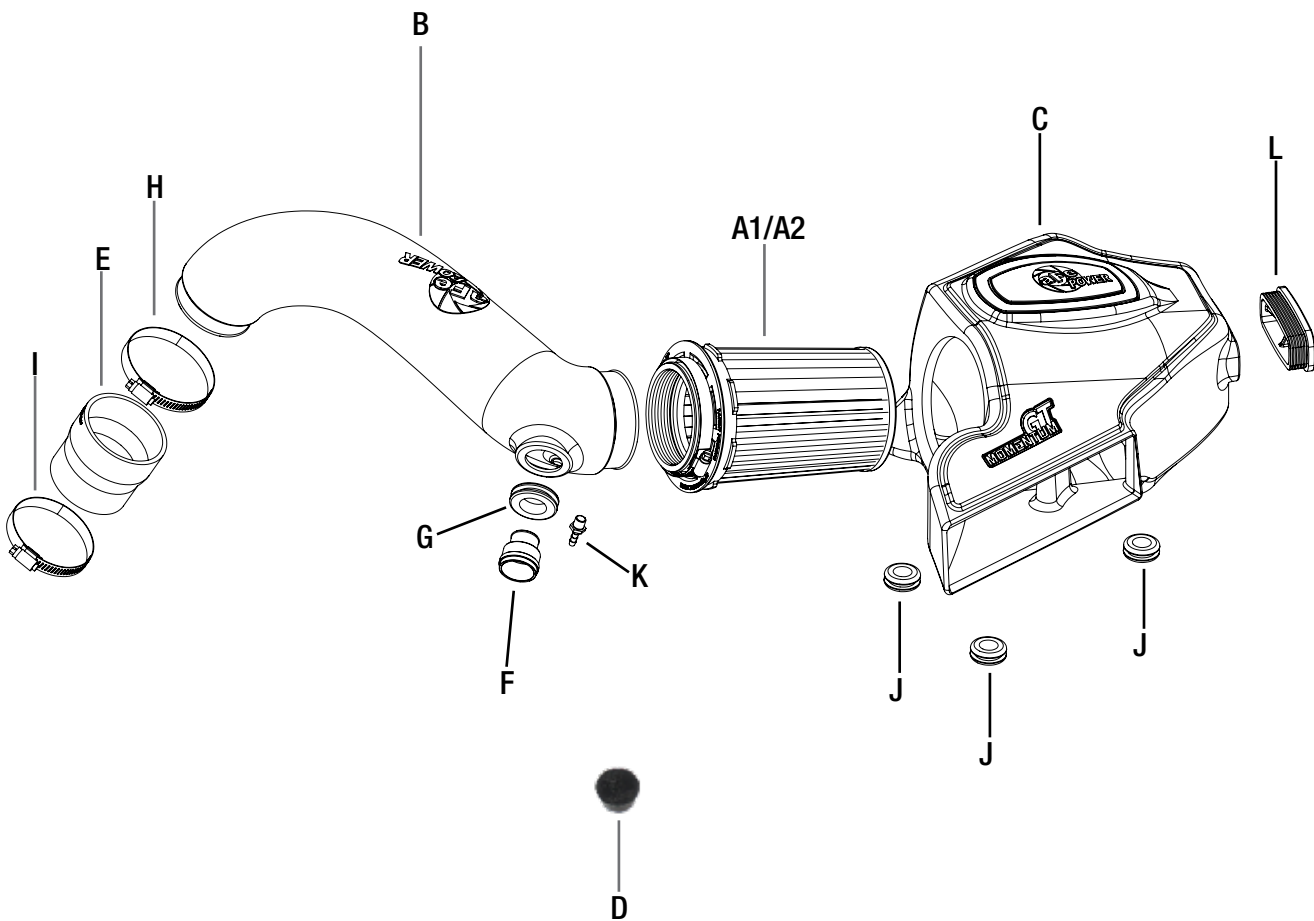

**Figure A****Refer to Figure A for steps 1-4**

Step 1. Disconnect the smog pump connector ① from the OE intake housing.

Step 2. Disconnect the rubber crank case breather tube ② from the OE intake housing.

Step 3. Loosen the clamp ③ connecting the OE intake tube to the turbo.

Step 4. Carefully lift and remove the entire OE intake assembly.

***Note:** Alternately, the top half of the OE air box can be removed with a Torx 25 screwdriver.

**Refer to Figure B for step 5**

Step 5. Install the 3 provided rubber grommets (4) on the bottom of the aFe air box as shown.

**Figure C****Refer to Figure C for steps 6-7**

Step 6. Install the larger grommet in the aFe tube as shown, followed by the aluminum smog pump fitting ⑤.

Step 7. Install the 3/16" brass fitting into the tube ⑥.

INSTALL



Figure D

Refer to Figure D for steps 8-9

Step 8. Insert the tube into the filter and tighten the clamp at this time.

Step 9. Then insert the tube & filter both into the housing by pressing while rotating until you feel and/or hear all 6 of the tabs seat themselves into the flange.

**Figure E****Refer to Figure E for steps 10-12**

Step 10. Install the provided reducer coupling and smaller clamp (#44) onto the turbo inlet pipe.

Step 11. Tighten clamp at this time.

Step 12. Slip the (#48) clamp onto the coupling but do not tighten at this time.

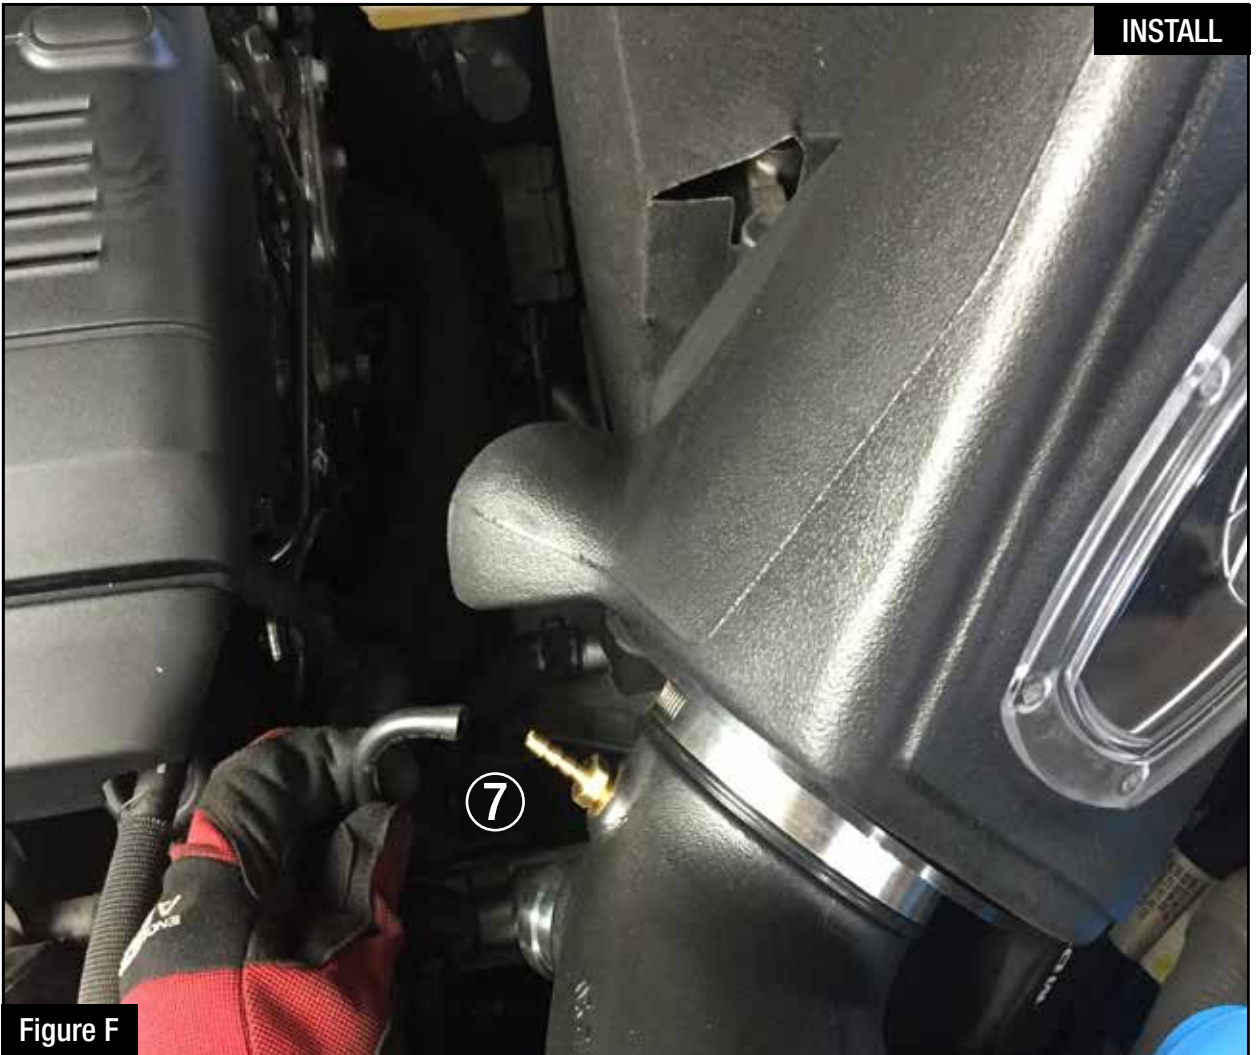


Figure F

Refer to Figure F for step 13

Step 13. Place the entire intake assembly in the engine as shown and re-attach the rubber breather hose (7).

***Note:** A small amount of lubricant on the brass fitting may help the rubber hose to slip over the brass fitting.



Figure G

Refer to Figure G for steps 14-18

Step 14. Lower the intake assembly over the 3 OE mounting locations and firmly press down on the air box.

Step 15. Next rotate the tube down into the coupling over the turbo inlet pipe.

Step 16. Align tube where it does not touch anything and tighten the (#48) clamp (8).

Step 17. Connect the smog pump hose to the aluminum fitting (9).

Step 18. Confirm all connections are secure and clamps tightened. Your installation is now complete.

***Note: Re-check all connections after approximately 100-200 miles. Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the smog check inspection.**

Page left blank intentionally



Page left blank intentionally

Page left blank intentionally



Pro DRY S Air Filter



P/N: 21-91103

Pro 5R Air Filter



P/N: 24-91103

Blue Squeeze Restore Kit



P/N: 90-50501

Blue Aerosol Restore Kit



P/N: 90-50001

Pre-Filter



P/N: 28-10213

SCORCHER GT Module



P/N: 77-46405

SPRINT BOOSTER V3



P/N: 77-16408

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com.

Warranty


General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72,TF	2 years
Air Intake Systems	50, 51, 54, 55, 75,TR,TA,TL	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Turbochargers	46-6	2 years*
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*See turbocharger warranty for more info

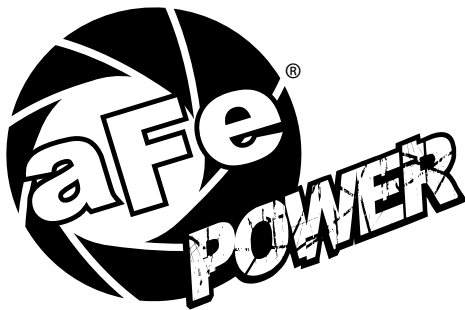

advanced FLOW engineering, inc.
252 Granite Street Corona, CA 92879
TEL: 951.493.7100 TECH: 951.493.7134
E-Mail: Tech@aFepower.com