

**6" CHEROKEE XJ
INSTALLATION INSTRUCTIONS
Kit# JC601KS/N-DX (Auto Only)
JC651KS/N-DX (5 Speed)**

SKYJACKER®
THE BEAR OF SUSPENSIONS

Before beginning the installation, read these instructions and the enclosed driver's "WARNING NOTICE" thoroughly and completely. Also affix the "WARNING" decal in passenger compartment in clear view of all occupants. If any of these items are missing from this instruction packet, do not proceed with installation, but call SKYJACKER® to obtain needed items. If you have any questions or reservations about installing this lift kit, call SKYJACKER® at 318-388-0816 for Technical Assistance or Customer Service departments.

Due to the inconsistency of vehicles when manufactured and the various options available, the amount of actual lift gained by this lift kit will vary.

PRE-INSTALLATION NOTES:

- A professional mechanic is recommended to perform the installation.
- Read the instructions carefully and study the photo illustrations before attempting the installation.
- Secure and properly block the vehicle on a level concrete or asphalt surface.
- Always wear safety glasses.

ACCESSORIES:

- 3/4" Spring isolator pad spacers, pr.#SIP275
(for vehicles equipped with a heavy duty bumper and winch)
- Slip yoke eliminator kit (NP/NVG231)#FIX231
- DOM 1.25" replacement tie rod tube.....#TR300



PRE-INSTALLATION TIPS:

Now you are ready to "set" the length of the new Rock Ready™ link assemblies. A) It is very important to position the swivel ball socket so that the bushings are exactly centered .

B) Measure the length of the link assembly between the center of each eye on each end. Rotate the rod end(s) as needed, being sure to keep the ends square with each other until link assembly measures:

Lower Front should be set @ 20 1/8"


Upper Front should be set @ 15 1/4"

These are pre-alignment measurements only. Final Measurements to be set by a qualified alignment facility.

C) On each rod end, rotate jam nut against steel tubing. Hold the rod end in place with a crescent wrench, and using a pipe or crescent wrench on the jam nut, completely tighten. On Double Flex link assemblies, one end is right hand threaded, and one end is left hand threaded so be sure to tighten properly.

NOTE: Jam nuts must be tight against steel tubing before installation. D) Recheck center-to-center measure to be sure it is correct, and that the ends are square with each other.

IMPORTANT: Under no circumstances should rod end (heim) be adjusted out more than 1/2" (approx. 6 threads) from the ball casing!

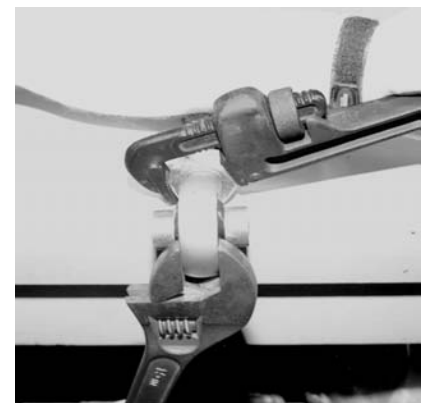

1. Secure and properly block the tires of the vehicle on a level concrete or asphalt surface. Jack up front of vehicle and install jack stands under frame behind front bumper.

2. Remove tires, front shocks, steering damper shock, and front track bar from vehicle.

3. Remove drag link assembly from pitman arm and pitman arm from steering box using a pitman arm puller. Install new pitman arm at this time. (Figure#1)

4. Remove sway bar end links. Lower differential and remove coils by removing spring bolts and retaining clips. (Figure#2)

5. Remove front brake lines and drill a 3/8" hole into each lower coil seat using the factory indent as a guide. Install the aluminum bump stop spacers using the 3/8" x 4-1/2" bolt, nut, and washer. (Figure#3)

6. With differential supported remove the lower control arms, and lower control arm alignment adjusters (Figure#4). Using another jack, support the transmission and remove the transmission cross member (figure #5). Install the left and right side sub-frame rails using the original cross member bolts and new 10mm stover nuts. Reuse the OEM lower control arm bolt to fasten sub-frame to the original lower arm mount, do not apply the nut at this time. (Figure#6)



figure #1

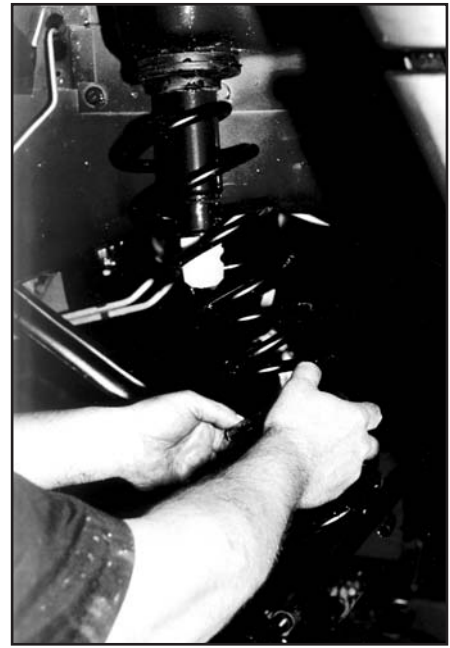


figure #2



figure #3



figure #4



figure #5



figure #6

7. Install the new transmission cross-member using the supplied 1/2" x 3" bolts, flat washers and nuts. Lower transmission to new cross-member and fasten transmission mount with OEM hardware. (Figure #7) The new lower control arms (14.50" tube length) mount to the OEM lower location at the differential and to the new position on the sub frame. Insert 2 large stepped spacers into each rod end of the new lower control arms and fasten using the original hardware at front differential and supplied 9/16" x 4" bolt placing a flat washer against bolt head and nut. (Figure#8)


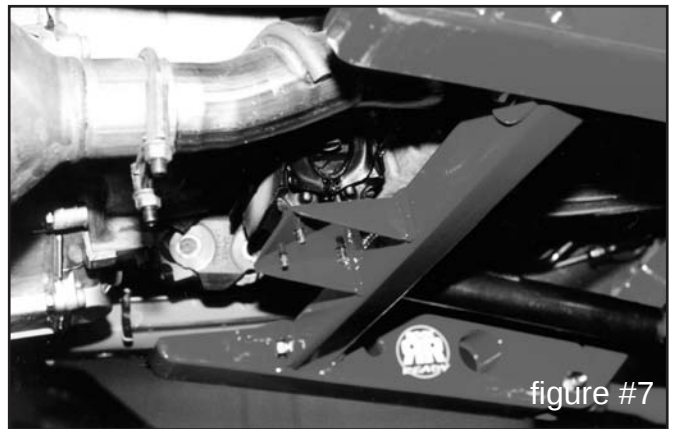


figure #7

8. Remove the upper control arms. Place the supplied tubular spacers into original upper control arm locations at frame and mount flat end of boomerang bracket to the inside of the of the upper control arm frame mount. With offset end of boomerang placed over the original lower control arm bolt apply nut from step #7. Boomerang should be mounted so that the V-shape points forward now creating the new upper control arm mount at frame. (Figure #9 & #10)



figure #8

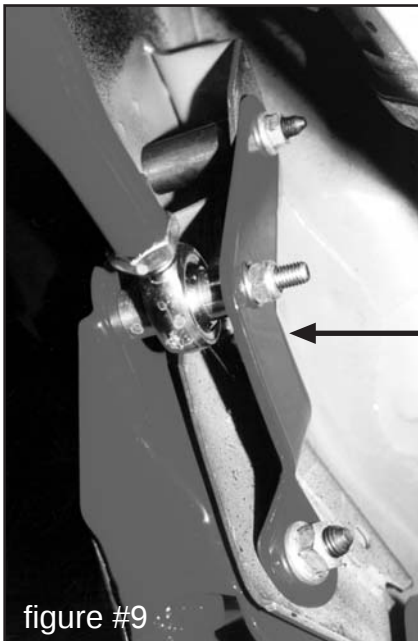

Front upper control arm mount of passenger side inner frame.

figure #9

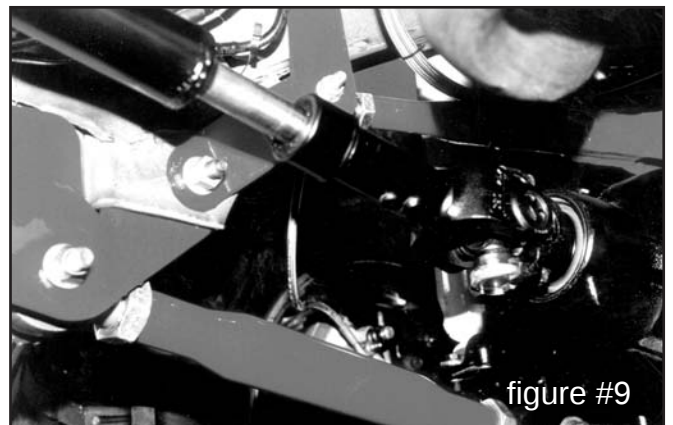


figure #9

9. Prepare the new upper controls arms by placing a small-stepped spacer into each end of the rod end. Install into the new upper mount using the supplied 10mm x 80mm bolt by applying a flat washer at bolt head and nylock nut then tighten. Place the forked end of the new arm onto the OEM upper control arm mount and fasten with the original upper control arm bolts. (Figure #11)



figure #10

10. Install new coils starting the top of the coil first onto the upper mount and then onto the lower mount. Fasten with OEM coil retaining clips and bolts. (Figure #12)

11. Install new adjustable trac bar by first greasing and installing poly bushing #2888 and sleeve #51792. Insert poly end into the OEM steering damper location on passenger side of axle, NOT the original trac bar location. Install new steering damper mounting bracket: tab goes over the sway bar end link stud with original nut, use the new 1/2" x 2 1/2" button head Allen bolt and nut to bolt new bracket to trac bar. (Figure #13)

12. Next install frame end of trac bar by following the hardware as shown in (Figures #14 & #15) being sure to keep rod end square (parallel) with frame mount. NOTE: Be sure not more than 1/2" of threads are extended from bar (including jam nut). Holding the rod end in place with a crescent wrench, using a wrench on the jam nut, completely tighten.

13. Apply grease to the polyurethane bushings and insert them into the lower eyes along with a metal sleeve (#54314). Install new quick double disconnect links on the inboard side of axle bracket being sure the offset is turned inward (figure #13 & #16). Using original lower hardware and tighten.



figure #12



figure #13



figure #14



figure #15

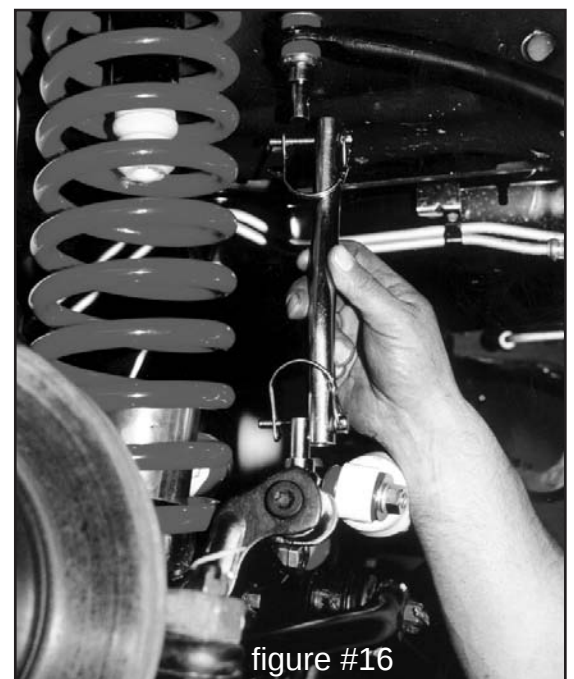


figure #16

14. Install front brake lines by using the supplied mounting bracket. This bracket is retained to the frame by the OEM brake line mounting hardware. Once installed check line for adequate clearances and kinks and bleed system. (Figure #17)

16. Install new shock absorbers and mount tires then lower to ground.

Rear Installation

This kit provides you with two sets of new u-bolts for both Dana 35,44 and 8.25" Dodge rear ends.

17. Raise and support vehicle under rear bumper. Remove tires and shock absorbers.

18. Prepare the new shackles by inserting a poly bushing half into each side, press a steel sleeve into each shackle. Using a 1/4" socket and a hammer, gently tap the grease fitting into the hole drilled in shackle (Figure #18). Remove the upper most inner bumper bolt on each side of frame and replace with the 10mm X 20mm bolt.

19. Remove the rear u-bolts, springs and rear swaybar endlink. Install poly bushings into the new endlink. Now insert a steel sleeve (#51792) into one end of each swaybar endlink. Mark and drill a 1/8" dia. hole 1/4" from each end of the swaybar. This hole should be drilled completely through the sway bar. Slide the non-sleeved end of the new endlink onto the drilled swaybar end apply a 1/2" flat washer and insert the hairpin retainer (repeat on opposite side) Lower both sleeved endlink ends into the lower mounts, Install 1/2" x 2" clevis pin from the outside. Apply a 1/2" washer and hairpin retainer. Swaybar endlink complete (Figure #19).

20. Remove the OEM shackle and install the supplied shackle assemblies using the factory hardware. Install the new leaf springs with the thick part of the degree shim facing the rear. Tighten shackle, springs and u-bolts at this time.

20. Remove the factory bump stops. Using the factory hardware fasten the bump stop spacers to the frame and reinstall the OEM bump stop to the spacer using the 4-5/16" x 1" nuts, bolts and washers. (See arrow in Figure #20).

21. Install the new stainless steel braided brake line and bleed brake system.

22. Install new shock absorbers and check clearances around brake lines a vent hoses.

23. Reinstall tires and lower to ground.

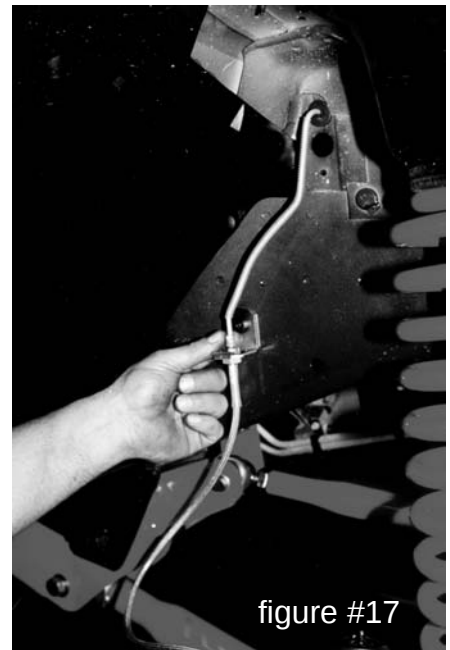


figure #17

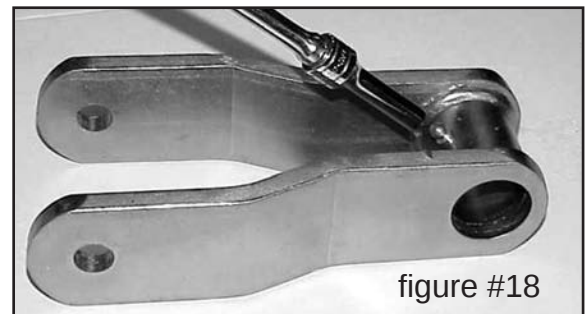


figure #18



figure #19

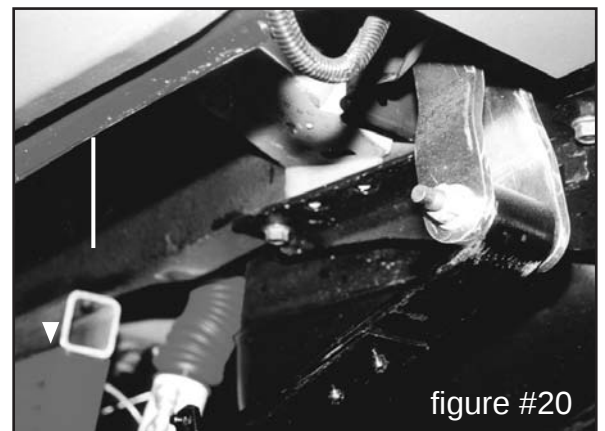



figure #20

**6" CHEROKEE XJ
INSTALLATION SUPPLEMENT**
Kit# JC6451KS/KSN-DX (5 Speed DANA 44/60/FORD 9")
Kit# JC6401KS/KSN-DX (Auto DANA 44/60/FORD 9")

SKYJACKER®
THE BEAR OF SUSPENSIONS

Skyjacker® does not provide a front cradle assembly in this kit. The front upper control arms are made to fit the OEM style upper control arm mounts used by the aftermarket differential manufacturers.

Prepare the new upper controls arms by placing a small stepped spacer into each end of the rod end. Install into the OEM upper mount using the factory hardware. Place the forked end of the new arm onto the aftermarket differential upper control arm mount and fasten with the original upper control arm bolts.

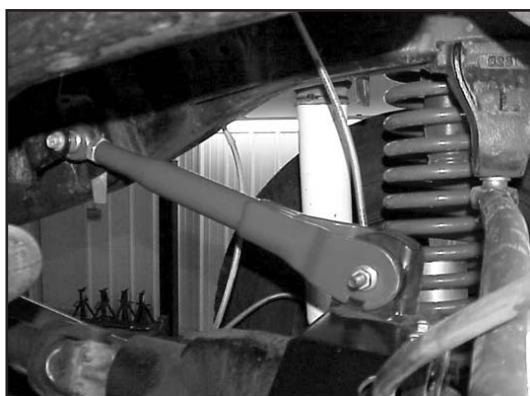

Careful attention must be taken to provide adequate clearance in between the new trac bar and the aftermarket differential.

Articulate the suspension in all four corners. This is a good time to check clearance before off-roading.

Fender Modifications
*Shown For '97 And Newer Models
'84-'96 Vary Slightly*



Modified Front

Stock Front



Stock Rear



Modified Rear

FINAL NOTES:

- Before driving the vehicle, check to make sure the brakes are operating properly and need no further bleeding.
- Inspect the components for tightness and for any damage periodically, especially after off-road use.
- After installation is complete, double check that all nuts and bolts are tight. (Do not retighten nut and bolt where Loctite® was used.) Check to ensure there is adequate clearance between All rotating, mobile and fixed members.
- Rotate drive shafts and check for interference at differential yoke and cardan joint. If necessary, lightly dress casting(s) and/or U-joint tabs in order to eliminate binding.
- On models with a rear carrier bearing, if a drive shaft vibration is present, the carrier bearing or its crossmember must be lowered.
- Ensure there is adequate clearance between exhaust and brake lines, fuel lines, fuel tank, floor board, and wiring harnesses. Check steering gear for interference and proper working order. Inspect brake lines for damage and adequate clearance. Test brake system.
- Have headlights readjusted to proper settings.
- Front end realignment is necessary so have a qualified alignment center realign front end to factory specifications.