

## KT09110 2001-2006 Sequoia 2WD & 4WD

### 2 1/2" Front Coil Spring Spacer Lift Kit With Rear Coil Spring Spacers

Bill Of Material			
Part No.	Description	Qty.	
M02233	End Link Bushing	4	
M03112	Bump-stop	4	
M00337	Shock/Strut Boot	4	
M03271	Coil Spring Spacer	2	
M03272	Coil Spring Isolator	2	
M03297	Rear Coil Spring Spacers	2	

S10518

M03271

**STRUT** 

ASSY.

**STRUT** 

**TOWER** 

Bill Of Material			
S10762	M10-1.25X 50mm Stud	6	
S10518	10mm Nylock Nut	6	
P01055	Cable Tie	4	
P10027	Grease Pack	2	

www.DaystarWeb.com **Tech Support Contact Info** Tech@DaystarWeb.com

Phone: 623.907.0081 Fax: 623.907.0088 841 South 71st Avenue Phoenix, AZ 85043

NUT



**WASHER** 



**CUSHION** 



**MOUNTING PLATE** 



M03272




**CUSHION** 



**WASHER** 




COIL SPRING



M00337



**BOOT** 

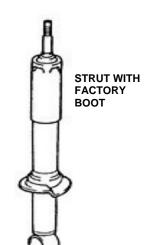

#### **INSTALLATION INSTRUCTIONS**

- Read complete instructions before beginning installation, the following special tools are recommended: Coil spring compressor, floor jack, ball joint separator, jack stands, bench vise, and metric hand tools.
- Jack the vehicle in the center of the front cross member.
- Support the vehicle by placing jack stands on the frame cross member so that the front tire/wheels are off the ground.
- 4 Remove the front tires/wheels.
- Disconnect the sway bar end links and remove the upper ball joint cotter pin and nut.
- Separate the upper ball joint from the spindle. (Using ball joint separator or a suitable tool, be careful NOT to damage the ball joint
- 7. Remove upper strut tower nuts holding strut assembly to strut tower (3) on each side of vehicle.
- Remove the lower strut bolt from the lower control arm and remove the strut assembly from the vehicle. (Note the direction of the bolt for reinstallation)
- Compress the coil spring on the strut assembly with a suitable coil spring compressor so that the coil spring has about 3/8" play in the strut and remove the upper strut isolator mount nut.
- 10. Remove the compressed coil spring assembly and dust boot from the strut.
- Install the supplied strut boot onto the lower factory stem cushion washer. (optional)
- Remove the coil spring isolator from the upper strut mounting plate.
- 13. Replace the upper strut mounting plate studs with the supplied 10mm longer studs S10762 with a bench vise and a deep well socket. (3 on each side)
- 14. Install the supplied coil spring isolator MO3272 to the upper strut mounting plate.
- Reinstall the compressed coil spring onto the strut assembly and reattach the upper strut mount plate using the stock hardware. See diagram. Torque upper strut mounting plate nut to 18 foot-pounds.
- 16. Decompress the coil spring in the strut assembly. Make sure that the spring is seated correctly into the strut assembly alignment indentation at the bottom of the strut and the top isolator.
- 17. Slide the coil spring spacer M03271 onto the top of the strut assembly over the 10mm studs.
- 18. Install the strut assembly into the strut tower and start the upper three 10mm lock nuts S10518. (Make sure that the bottom of the strut is aligned as well)
- Install the lower strut bolt in the original position and torque to 100 foot-pounds. (Step 8)
- 20. Using the floor jack, raise the lower control arm and connect the upper ball joint on the upper control arm to the spindle. Torque nut to 80 ft lbs. and make sure that you replace the cotter pin. (Not supplied)
- Install the supplied sway bar end link bushings M02233.
- Remove and replace the bump-stops with a pair of Channelocks. (optional)
- 23. Install the front tires/wheels.
- 24. Lower the vehicle onto the ground and tighten the upper strut tower 10mm nuts S10518. Torque to 35 footpounds. (3 on each side)
- Do wheel alignment after lift installation.
- 26. RETORQUE ALL BOLTS AFTER 500 MILES.



2 1/2" Front Coil Spring Spacer Lift Kit With Rear Coil Spring Spacers

www.DaystarWeb.com **Tech Support Contact Info** Tech@DaystarWeb.com

> Phone: 623.907.0081 Fax: 623.907.0088 841 South 71st Avenue Phoenix, AZ 85043

# INSTALLATION INSTRUCTIONS REAR

- 1. Jack up rear end and place jack stands under frame allowing rear suspension to move up and down freely.
- 2. Disconnect lower shock mount bolts/nuts so that the rear axle droops and the coil springs become loose.
- 3. Disconnect the panhard bar at the driver's side of the axle.
- 4. Remove the coil spring and the coil spring isolator/bump-stop.
- 5. Place the isolator/bump-stop into the new coil spring spacer and then onto the frame. Reinstall the coil spring in between the coil spring spacer and the axle. (Note: you may have to pry the coil spring onto the axle pad.)
- 6. Jack up the rear suspension so that the coil spring seats into the coil spring spacer and on the axle pad. Reconnect the lower shocks mount bolts/nuts and reconnect the panhard bar.
- 7. Jack up the rear of the vehicle, remove the jack stands and lower the vehicle. Check all bolts/nuts for tightness and recheck after 500 miles.



#### **WARNING**

This vehicle has been modified to enhance its performance. The steering, braking and handling of this vehicle will differ from standard passenger cars and trucks. This vehicle handles differently from an ordinary vehicle in driving conditions which may occur on streets, highways and off road. Avoid unnecessary abrupt maneuvers, sudden stops, sharp turns and other driving conditions that could cause loss of control, possibly leading to a roll over or other accident that could result in serious injury or death to driver and passengers. If larger tires are installed the speedometer will read lower than the vehicles actual speed.

DRIVE WITH CARE. REDUCE SPEED AND WEAR SEAT BELTS AT ALL TIMES.

This kit should be installed by a professional mechanic

