

HYUNDAI

<u>Year</u>	<u>Model</u>	<u>Engine</u>	<u>Color</u>	<u>TPS Location</u>	<u>MAP/ MAF Wire Color</u>	<u>MAP/ MAF Location</u>	<u>Footnotes</u>
2011-2012	Equus	4.6L	BROWN	1	BLUE	B	(**)
2008-2012	Azera	3.3L	GREEN	1	YELLOW	F	
2010-2012	Genesis Coupe	2.0L	WHT/BLK	1	PINK/BLK	A	
2010-2012	Genesis Coupe	3.8L	GREEN	1	YELLOW	A	
2010	Genesis	3.3L	BLUE	1	GRN/WHT	C	
2010-2012	Genesis	3.8L	ORANGE	1	GRN/WHT	C	
2010	Genesis	4.6L	GREEN	1	PURPLE	B	(**)
2011-2012	Genesis	4.6L	BROWN	1	BLUE	B	(**)
2008	Santa Fe	2.7L	GREEN	1	BROWN	H	
2009	Santa Fe	2.7L	RED	1	BROWN	H	
2010-2012	Santa Fe	2.4L	PINK/BLK	1	BLUE/ORG	H	
2008-2009	Santa Fe	3.3L	GREEN	1	YELLOW	H	
2010-2012	Santa Fe	3.5L	GREEN	1	BLACK	H	
2011-2012	Sonata	2.0L	PINK/BLK	1	BLUE	E	
2007-2008	Sonata	2.4L	PINK/BLK	1	ORANGE	B	(**)
2009-2010	Sonata	2.4L	PINK/BLK	1	BLU/ORANGE	B	(**)
2011-2012	Sonata	2.4L	PINK/BLK	1	BLUE	E	
2003-2004	Tiburon	2.0L	WHITE	1	GRN/WHT	A	
2003-2004	Tiburon	2.7L	BLUE	1	BLU/WHT	A	(**)
2005-2008	Tiburon	2.0L	WHITE	1	GRN/WHT	B	(**)
2005-2008	Tiburon	2.7L	BLUE	1	BLUE	B	(**)
2008-2009	Tucson	2.0L	BLUE	1	GREY	B	(**)
2010-2012	Tucson	2.0L 2.4L	PINK/BLU	1	BLUE	G	
2008-2009	Tucson	2.7L	BLUE	1	BLUE	B	(**)
2008-2012	Veracruz	3.8L	GREEN	1	YELLOW	H	

KIA

2010-12	Forte	2.0L	PINK	1	PINK	D	
2010-12	Forte	2.4L	PINK	1	PINK	D	
2006-2010	Sedona	3.8L	GREEN	1	YELLOW	E	
2010-2011	Rio, Soul	1.6,2.0L	YELLOW	1	PINK	H	
2005-2010	Sportage	2.0L	PINK	1	LAVND/ORNG	B	(**)
2005-2010	Sportage	2.7L	LAVENDR	1	GREEN	B	(**)

Footnotes

(**) = Indicates that you will be connecting to the (MAF) Mass Air Flow Sensor, all others connect to the (MAP) Manifold Absolute Pressure Sensor

TPS Locations

1 = The (TPS) Throttle position sensor is located on the throttle body

MAP/MAF Sensor Locations

A = On top of intake manifold

B = Mounted to air intake tube between throttle body and air cleaner

C= Top of Intake Manifold near the throttle body.

D= MAP sensor is located on the intake manifold to the right and down from the dipstick.

E= MAP is located on the intake manifold near the throttle body

F =MAP is on the Right rear of engine on Intake Manifold

G = MAP is mounted to the top center of the engine

H = MAP is on the top rear of the engine

Note: Wiring diagrams and photos are available from www.hmaservice.com and kiatechinfo.com (factory service websites) if you need additional help with locations, etc.

Optional 02 Sensor Signal connections (all vehicles)

<u>Vehicle/Connector type</u>	<u>Wire Color</u>
Acura/Honda 4 Wire Connector	Black
Alfa Romeo 3 Wires	Black
Audi 3 Wires	Black
BMW 3 Wires	Black
BMW 4 Wires	Black
Chrysler 3 Wires	Black
Chrysler 4 Wires	Black
Chrysler Import 4 Wires	Black,Blue or Yellow
Ford 3 Wires	Black
Ford 4 Wires	Black
Geo 4 Wires	Black
GM 2 Wires	Black
GM 3 Wires	Black orPurple
GM 4 Wires	Black orPurple
Hyundai (All)	Black
Isuzu 3 Wires	Blue
Isuzu 4 Wires	Blue
Kia 3 Wires	Black
Lancia 3 Wires	Black
Mazda 3 Wires	Black
Mazda 4 Wires	Black
Mercury 3 Wires	Black
Mercury 4 Wires	Black
Mitsubishi 4 Wires	Black,Blue or Yellow



Package Contents:


- (1) Self-adhesive dash or console pedestal mounting disc
- (1) Alcohol cleaning pad

No Tools Required for installation.


***Note:** Adhesive disc is intended for semi-permanent installation and one time application. If disc needs to be removed, please see the removal instructions below.

Dash or Console Mounting Instructions


- Step 1. Choose a suitable location for disc (and pedestal) installation. **Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road or hinder vehicle operation.**
- Step 2. Clean the dash or console surface area thoroughly with the included alcohol pad. Allow the area dry before applying the mounting disc.

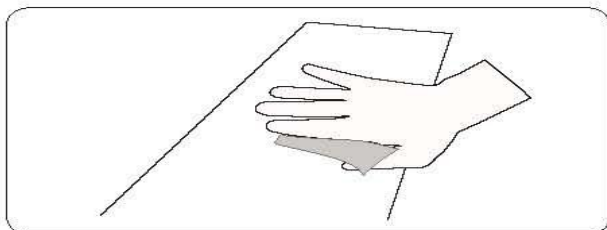

- Step 3. Remove the paper backing of the disc and place on the cleaned surface. Press the top of the disc down firmly to allow the adhesive to stick to the surface. Allow 24 hours for the adhesive to cure to the surface before applying any pressure.

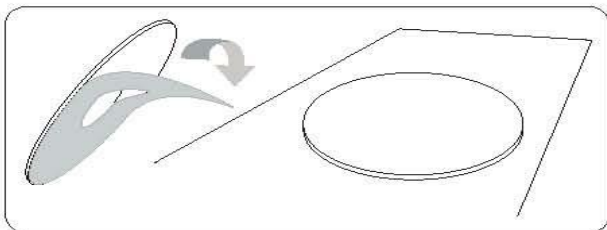


- Step 4. Place the suction cup of the pedestal (sold separately) firmly down on the center of the mounting disc and lower the securing lever.

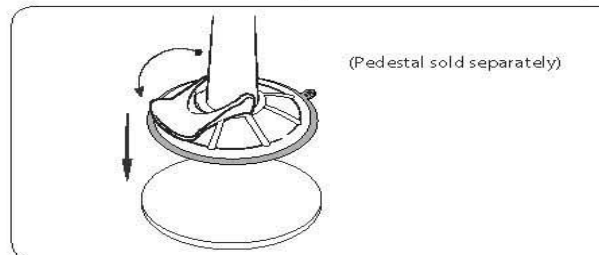

Disc Removal Instructions

- Step 1. Prepare the surface around the disc by applying a generous amount of rubbing alcohol or similar adhesive removal product to the area with a cotton swab. Let the liquid saturate the adhesive area for about a minute.
- Step 2. Take a long piece of dental floss in each hand and slowly work back and forth at the base of the adhesive disc. Gently use the dental floss to cut the adhesive from the dash or console until the black plastic disc is removed.

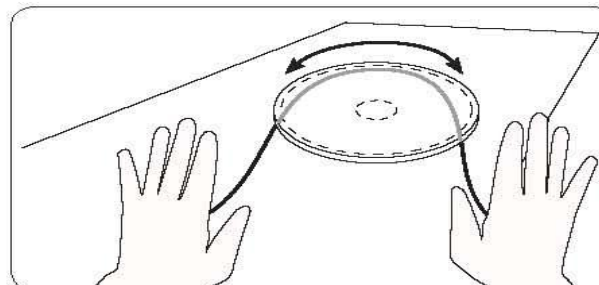

- Step 3. If the sticky adhesive area breaks apart or does not come off completely, re-apply a small amount of alcohol (or adhesive removal liquid) and carefully lift off the remaining area by hand.



GN014-SBH
Windshield Mount with
Swivel Ball Head Assembly

Patent Pending

Package Contents:

- (1) GN014 - Mini windshield mount
- (1) Swivel ball head assembly with dual T-tab pattern adapter plate and tightening ring.

Compatible with:


- All Arkon dual T-tab pattern phone cradles and adapter plates
- Most Garmin 17mm ball connections. (See website for full list.)



Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.


Windshield Mounting

- Step 1. Find a safe location on the interior of the vehicle's windshield to mount the pedestal. Firmly push the suction base (A) against the windshield and flip the base lever down (B) to the locked position. See diagram below.
- Step 2. Adjust the angle of the pedestal arm by tightening the angle adjustment knob (C) at the base to the desired angle.

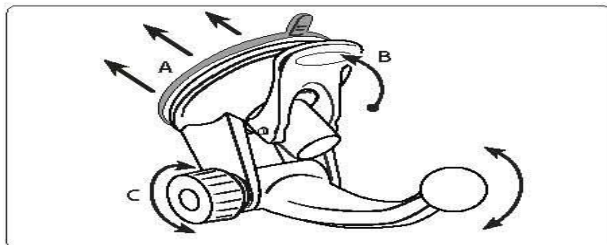


Swivel Ball Head Assembly Attachment

- Step 1. Slip the tightening ring (D) over the pedestal ball. Snap the dual-T head adapter plate (E) on to the pedestal ball (F). Screw the tightening ring over the adapter plate until securely holding the plate. Adjust the angle as needed.

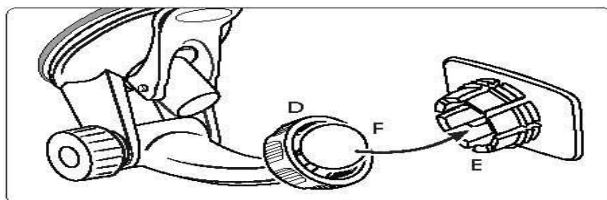


Attach Cradle or Device to Pedestal

- Step 1. To attach your cradle or device (not included, sold separately) to the dual T-head, insert the dual T-tabs (G) into the dual T-slots (H) on the back of the cradle or device.

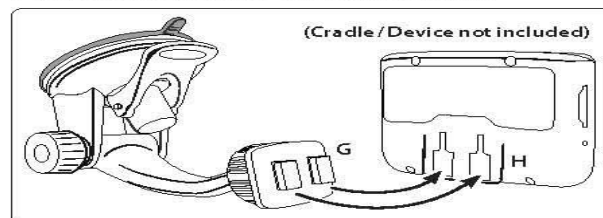

Attaching a Garmin Device to Pedestal

- Step 1. Do not attach the swivel ball head assembly. Attach your Garmin device (not included, sold separately) to the ball head by firmly inserting the ball head (I) into the cavity (J) in the back of the device.

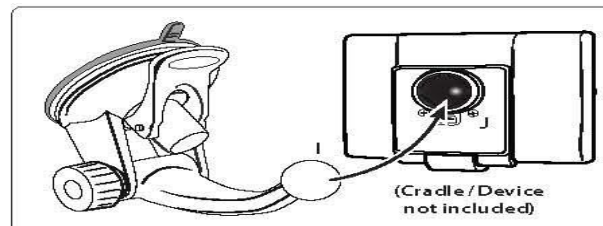

All brand names and product names are trademarks of their respective owners.



Safety Precautions

Follow all manufacturer safety guidelines for operating your device. Failure to practice safe usage of GPS device while driving may result in damage, injury, or death.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9am - 5pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China and Taiwan

© Copyright 2009 Arkon Resources, Inc.