


OWNER'S MANUAL & SAFETY INSTRUCTIONS

SAVE THIS MANUAL. Read carefully and understand all assembly (if applicable) and operation instructions before using product. Protect yourself and others by reading all safety information, warnings and precautions. Failure to comply with instructions could result in personal injury and/or damage to vehicles or property. Please retain instructions and receipt for future reference.



3,500 LB. CAPACITY VEHICLE SERVICE RAMPS

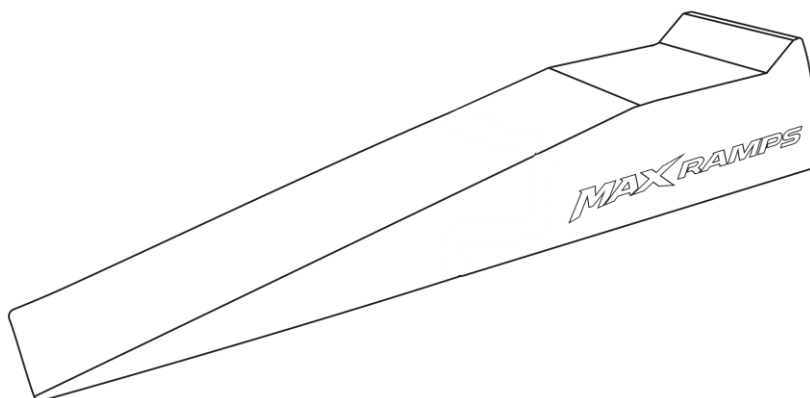

Items #: MR30-5, MR40-7, MR56-8, MR67-10

When unpacking, make sure that product is undamaged. If any pieces are missing or damaged, do not use product and call 844-629-7267 or email support@maxramps.com.

Copyright 2026 by MaxRamps. | MaxRamps.com | Rev. 06012026



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MR30-5, MR40-7
MR56-8, MR67-10



IMPORTANT! General Guidelines

- Read and understand all instructions in this owner's manual. Failure to follow all instructions in this owner's manual may result in serious injury or property damage.
- Always keep these instructions with the product and review before each use. Do not allow persons to use this ramp until they have read this manual and have developed a thorough understanding of how the ramp works.
- Inspect product before each use to ensure all parts and pieces are in safe and working order and free of defects. Do not use if parts are damaged.
- Never modify the product in any way. Modifying product immediately voids warranty.
- Make sure your vehicle is compatible with the ramps by checking axle weight, clearance angle, and tire width. See your product's technical specifications on page 4.
- Product must make FULL CONTACT with the ground. Do not use any of our products as a bridge under any circumstances.
- Use product on dry, level, and hard surfaces only.
- Store product indoors in a climate-controlled environment. Excessive heat or cold may cause damage to stored ramps.
- Do not exceed the maximum load capacity of the product.
- All circumstances cannot be covered in this manual. Use common sense and practice general safety precautions when using this product.
- Parts and/or instructions are subject to change without notice. Please check our website for the most current instructions.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MR30-5, MR40-7
MR56-8, MR67-10



IMPORTANT! Safety Instructions

- Before ramp usage, inspect and ensure that ramps are free from damage.
- CAUTION! Before ramp usage, ensure other persons and pets are clear of the vehicle and ramps.
- WARNING! Do not exceed the rated weight capacity of 3,500 lb. maximum axle capacity.
- WARNING! Do not exceed the recommended maximum tire width (see page 4 under Technical Specifications & Packing List).
- Use each pair of ramps at the front or rear; do not use two ramps for one side.
- CAUTION! Use ramps on dry, level, hard surfaces. Do not ascend or descend ramps if tires are wet.
- Each ramp must make FULL CONTACT with the ground. Do not use the ramp as a bridge under any circumstances.
- CAUTION! Always drive slowly and cautiously when ascending or descending the ramps. NEVER accelerate or brake suddenly.
- Another person who is standing clear of the vehicle should act as a spotter. The spotter is to observe and guide the driver when ascending or descending the ramps.
- WARNING! Do not disconnect brakes, engine, transmission components, drivetrain, driveshaft, universal joints, or wheels while the vehicle is on the ramps.
- CAUTION! ALWAYS chock the vehicle's tires that are in contact with the ground when using ramps.
- WARNING! ALWAYS place the vehicle transmission in Park, or the lowest gear for manual transmissions, and engage the parking brake when using ramps.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MR30-5, MR40-7
MR56-8, MR67-10

Technical Specifications & Packing List

SKU	MR30-5	MR40-7	MR56-8	MR67-10
Product Dimensions	30" x 10" x 5" (L x W x H)	40" x 10" x 7" (L x W x H)	56" x 12" x 8" (L x W x H)	67" x 14" x 10" (L x W x H)
Package Includes	2 ramps	2 ramps	2 ramps	2 ramps
Ramp Angle	16-degrees	17-degrees	10.8-degrees	10.8-degrees
Max Tire Width	8"	8"	10"	12"
Load Capacity	1,750 lbs per ramp, 3,500 lbs combined per pair			
Material	EPS solid core high-density foam with polyurea coating			



IMPORTANT! Use & Care

- The ramps are designed for use with passenger vehicles and light trucks.
- The ramps are NOT intended for commercial heavy-duty trucks.
- The ramps are NOT intended for toolboxes, carts or any non-passenger vehicle wheels/tires.
- Use the correct ramp for the task. Ensure that the angle of the ramp will clear your vehicle's maximum clearance angle.
- DO NOT modify the ramps in any way. Modifying product immediately voids warranty.
- Store product indoors in a climate-controlled environment. Excessive heat or cold may cause damage to stored ramps.
- DO NOT throw or drop ramps onto the ground.
- Ramps may be washed with mild soap and water. Be sure to fully rinse soap off the ramps and dry fully before next use.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MR30-5, MR40-7
MR56-8, MR67-10



IMPORTANT! Set Up & Operation Instructions

1. Inspect the ramps to ensure there is no damage BEFORE EVERY USE. Ensure all persons not involved in the process are clear of the ramps.
2. Place each ramp centered and in line with the tires, with the steering wheel pointed straight and in line against the tire tread.
3. With a spotter present (see page 3), carefully ascend the ramps in a slow and controlled manner until the tires rest on the flat, level platform of the ramp. Ensure that the spotter signals and guides you. WARNING! Never accelerate or brake suddenly.
4. When the vehicle tires are on the platform of the ramp, shut-off the engine. Place the vehicle transmission in Park, or the lowest gear for manual transmissions. Engage the parking brake.
5. Carefully exit the vehicle and securely chock the tires in contact with the ground in a manner that will prevent the vehicle from descending. Example: If the vehicle was driven forward and the front tires are on the ramp platform, wheel chocks should be placed behind the rear tires.
6. Inspect the perimeter of the vehicle and ensure that the vehicle is fully secure and stable prior to working on the vehicle. WARNING! Keep parking brake on and tires chocked at all times when vehicle is on the ramps.
7. DESCENDING RAMPS: In preparation for descending the ramps, ensure that the parking brake is still engaged and remove wheel chocks.
8. With a spotter present, enter the vehicle, apply the foot brake and start the engine. Keep the foot brake applied and disengage the parking brake.
9. In a slow and controlled manner, place the vehicle in reverse and descend the ramps. Ensure that the spotter signals and guides you. WARNING! Never accelerate or brake suddenly.
10. When the vehicle is completely off the ramps and parked, the ramps may be removed and stored.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MR30-5, MR40-7
MR56-8, MR67-10

Limited Warranty and Disclaimer of Liability

Subject to the terms below, MaxRamps ("Manufacturer") warrants that the Product conforms to Manufacturer's published specifications and is free from defects in materials and workmanship under normal use. NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE MADE.

MaxRamps products purchased from an authorized dealer or directly from MaxRamps are backed by a one-year warranty. This warranty is limited to solely the repair or replacement of manufacturer defects and does not cover damage to a car, personal injury, labor, or any other damage or injury. MaxRamps is not responsible for damage or injuries caused by improper or unintended use. MaxRamps shall not be responsible for consequential damage or costs. Proof of purchase is required for all warranty claims. This warranty is non-transferable and applies only to the original purchaser (other than for resale).

EXCLUSIONS FROM WARRANTY: 1) Misuse, abuse, neglect, accident, or use beyond rated capacity; 2) Improper or unintended use; 3) Cuts, gouges, abrasions or surface wear caused by tires, tools, heat, or improper contact; 4) Extreme chemicals; 5) Improper storage; 6) Cosmetic blemishes or minor surface irregularities that do not affect functionality; 7) Normal wear and tear; 8) Unauthorized modifications or repairs; 9) Damage caused by natural disasters; 10) Incidental, indirect, or consequential damages, including vehicle damage, personal injury, loss of time, or other expenses.

PURCHASER'S RESPONSIBILITY: 1) Keep and provide proof of purchase for all warranty claims; 2) Inspect product upon receipt and inform of shortages within 10 days of delivery or defects within 10 days of discovery; 3) Use and maintain the product per the owner's manual; 4) Submit claims in writing within the above timeframes. Submissions not within the above timeframes are deemed waived.

MaxRamps continues to conduct research and development on products whereby specifications are subject to change without notice.

QUESTIONS? Please contact MaxRamps at 844-629-7267 or email support@maxramps.com.



WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information: www.P65Warnings.ca.gov

