



655 Eisenhower Drive
Owatonna, MN 55060 USA
Phone: (507) 455-7000
Tech. Serv.: (800) 533-6127
Fax: (800) 955-8329
Order Entry: (800) 533-6127
Fax: (800) 283-8665
International Sales: (507) 455-7223
Fax: (507) 455-7063


Form No. 552656

**Parts List and
Assembly Instructions for: 552650**

Aluminum Jack Wall Mount

Item No.	Part No.	Qty.	Description
1	552651	1	Mounting Base Plate
2	552670	4	Locknut (#6-32 nylon insert)
3	552669	4	Button Hd. Screw (#6-32 x .500)
4	552654	2	Rubber Stop Pad
5	552652	1	Strap
6	RS-9100-300	8	Flat Soc. Hd. Cap Screw
7	552653	4	Spring-action Handle Holder

Parts Included But Not Shown
552655 1 Trade Name Decal

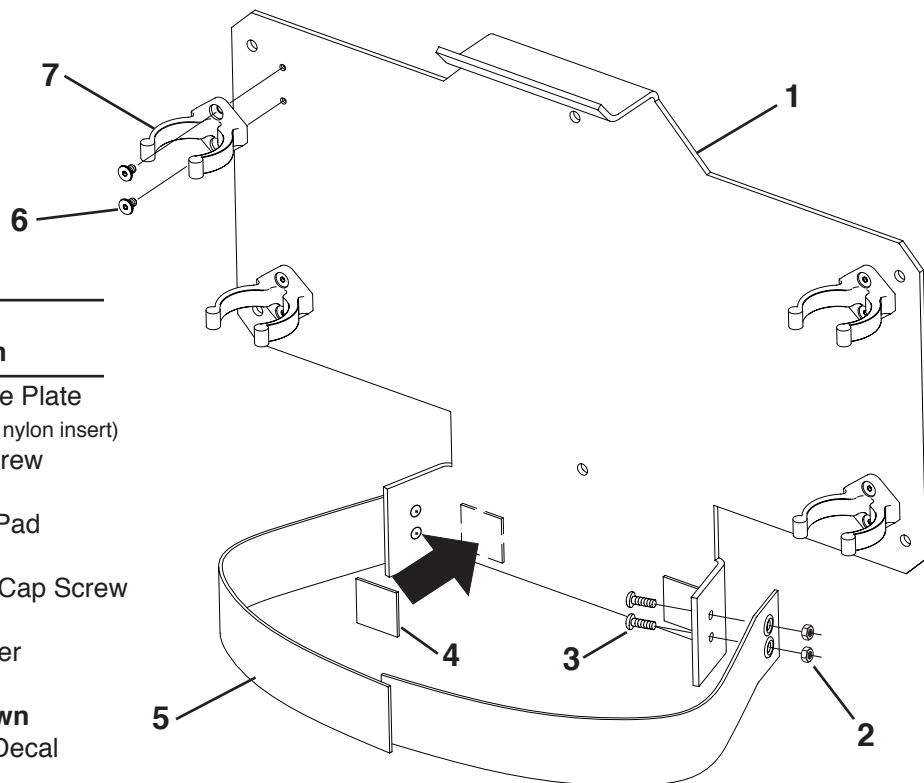

Assembly Instructions

1. Using a 3/32" allen wrench (not supplied), install the four spring-action handle holders (Item #7) to the mounting base plate (#1) with the eight screws (#6) and tighten hand-tight.
2. Pull apart the 2-piece strap (#5), separating the red strap from the black strap. Insert two screws (#3) into a mounting tab *from the direction shown in illustration*. Attach the red strap (hook side of strap outward) to the outside of the mounting tab and secure with two nuts (#2).
3. Insert two screws (#3) into the opposite mounting tab *from the direction shown in illustration*. Attach the black strap (loop side of strap facing inward) to the mounting tab and secure with two nuts (#2).
4. Remove paper backing from one rubber pad (#4). Apply the pad to the mounting base plate approximately 1/8" (3 mm) from the bottom edge of the mounting base plate and 1/8" (3 mm) from the bend radius of the mounting tab. Repeat with the other rubber pad, locating it next to the opposite mounting tab.

Wall Mounting Instructions

1. Use the appropriate type of fasteners for the type of wall surface chosen. The outer edge mounting holes of the mounting base plate will line up with wall studs set to 16" (406.4 mm) on center. Additional mounting holes can be added to the mounting base plate to accommodate any location.

Sheet No. 1 of 1

Issue Date: Rev. B, June 6, 2014